




Window Mulling


****IMPORTANT**** Please note these are typical to Westeck Windows. Mulling directions have differing specifications dependant upon window size and application.

If you are to mull a window onsite, (typically due to size) the window(s) will arrive with slots routed into the frame. Use a silicone gun to apply a generous amount of sealant to the routed slot. (Apply to both window frames that are to be mullled) Also apply to inside width of frame.

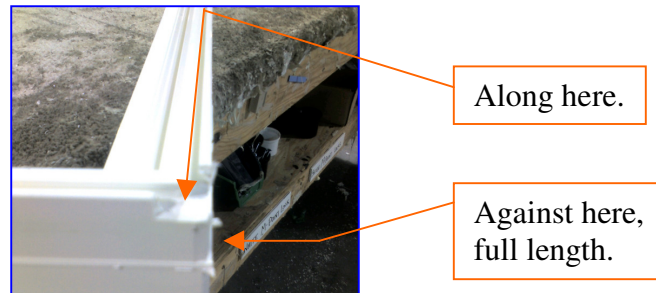

Pound in mull strip (VERY CAREFULLY) into both slots on the front face of window with a rubber mallet. Be sure to strike clean (no glancing blows) to avoid scuffmarks. Be sure to strike centre of mull strip to avoid cracking mull strip. Then carefully flip product over.

Product should have mull strip pounded in on opposite side. Slide in steel between windows and apply silicone to routed slots on newly exposed side, then pound in mull strip on this final side. Fasten steel from inside glazing channel every 8 inches with self-tapping screws. Seal over screw heads with silicone.

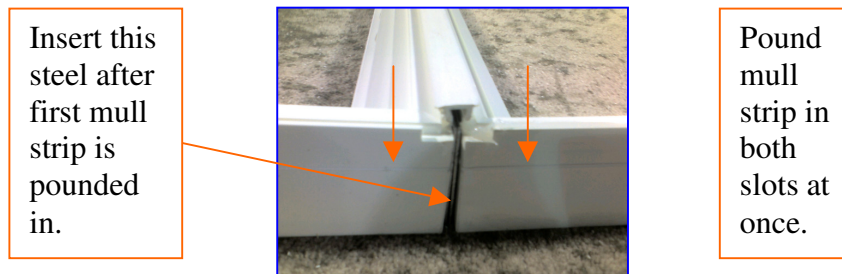

The bottom mull strip should be in prior to steel insertion. If steel will not go in, 'fold' window up (slightly) at centre until steel drops.